


STEEL STRAPPING SEALER

PARTS LIST		
Part No	Part Name	Qty./Tool
# 1	Sealer Handle Assembly	2
# 2	Jaw	8
# 3	Notcher	2
# 4	Notcher Pin	2
# 5	Screw & Nut	1
# 6	Jaw Pin	2
# 7	Toggle Pin	2
# 8	Side Plate	2
# 9	Guide Pin	1

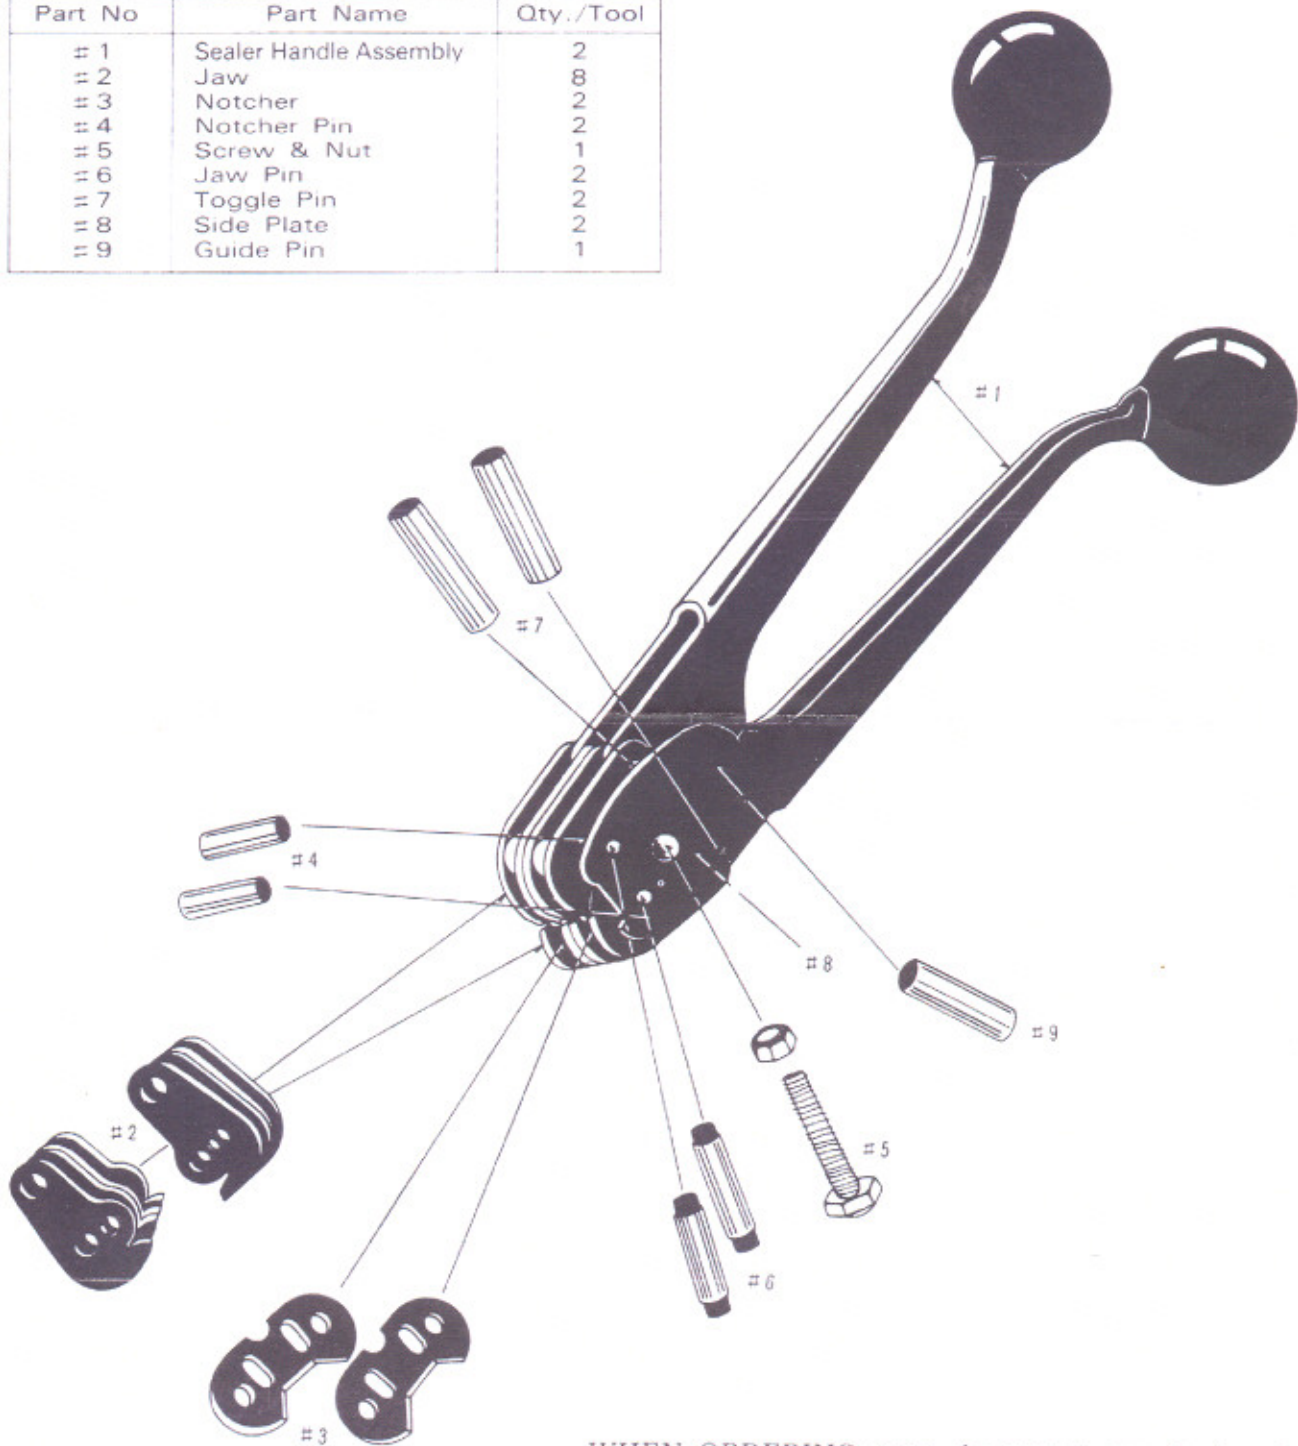

WHEN ORDERING parts, be sure to specify the size or model number of the sealer, in addition to the part number.

SA480
SA680

YYC310-01